

## INSTRUCTION MANUAL

**ENGLISH ENG**

### CONVECTOR HEATER MODEL: OR-FH02C



Dear customers! Thank you for purchasing ORION products. Before operation, please read this instruction manual. Save it for future reference.

## **IMPORTANT SAFETY INSTRUCTIONS**

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packing ( such as plastic bags)
4. Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
5. Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
6. Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
7. Ensure the cord is fully extended before use and arrange it so that it is not in contact with any part of the heater.
8. In use, some parts of the heater are hot. When moving, hold the heater only by the handle provided.
9. Do not use the heater in areas such as garages where petrol, paint or other flammable substances are used or stored.
10. Do not use near or point the heater to furniture, animals, curtains or other inflammable objects. Keep combustible materials such as furniture, bedding and any other combustible materials at least 1 metre from the front and sides, and from the rear of the heater.
11. Do not place the cord under carpet or cover with throw rugs or furniture. Arrange the cord so that it cannot be tripped over.
12. The unit is also fitted with a tip over switch. Do not use on thick and long pile carpets, as the heater may not work, due the tip over switch not been activated.
13. To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
14. This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, bathroom swimming pool etc. where the likelihood of immersion or splashing could occur.
15. Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
16. A common cause of overheating is deposits of dust and fluff entering the heater. Ensure these deposits are removed regularly by unplugging the heater, allowing it to cool and cleaning as described in the Care, Cleaning and Storage section.
17. Be sure that no other high current appliances are plugged into the same circuit with your heater as an overload can occur.
18. Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
19. Do not use the appliance for other than its intended use.
20. Do not use outdoors. **FOR INDOOR USE ONLY.**
21. Do not leave the appliance unattended when switched on.
22. Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc. Do not cover the unit when in operation.
23. Do not locate the heater immediately below a socket-outlet.
24. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
25. This product is intended for normal domestic/household use only.
26. Use this heater as described in this manual. Any other uses, not recommended by the manufacturer, may cause fire, electric shock, or injury to persons and may void the warranty.

27. The appliance should be placed with a minimum distance of 90 cm away from flammable objects (e.g. curtains), walls or other structures!
28. Use only an approved extension cord that is suitable for the appliance rating!
29. Do not lay the cord under a carpet. Do not lay rugs, mats or similar articles on it. Position the cord so that it does not pose an obstruction or a tripping hazard.
30. Never pull the plug out of the socket at the cord!
31. Always disconnect the mains plug when the appliance is not in use.
32. Attention! The appliance may only be used for normal domestic use and not for industrial purpose.

## CHARACTERISTICS

- Ceramic heater ORION OR-FH02C
- 3 modes: 36W/600W/1200W
- Cool wind
- Adjustable thermostat
- Power indicator light
- Overheat protection
- Power cord length: 1,5m
- Working area: up to 20m<sup>2</sup>
- Convenient to use
- Nominal voltage/frequency: AC230V~50Hz
- Nominal power: 1200W
- Nominal current: 6,25A
- Product size: 20,5x13,5x25,5cm
- Box size: 21x14x26cm
- Net/gross weight: 1,3/1,46kg
- Body color: silver
- Mount: table mounted

**Note:** subject to change without notice

## DETAILS

1. Power indicator
2. Thermostat
3. Rotary switch
4. Outlet wind




## BEFORE FIRST USE

1. Before use, remove all packaging and inspect the appliance for any damages. If there are appears to be any damages, please take back to place of purchase for a replacement.
2. Ensure that all the accessories are included as per diagram above before you can continue with the installation.

3. Ensure that the location of the heater installed is not directly under a power socket and that a power socket is available to power the appliances for use.

## INSTRUCTIONS FOR USE

### POWER AND HEAT SETTINGS

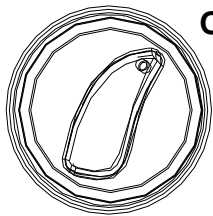

**OFF**

**FA**

**I**

**II**


OFF..... OFF

FAN..... Fan only operation

I .....LOW heat setting (600W)

II .....HIGH heat setting (1200W)

### THERMOSTAT

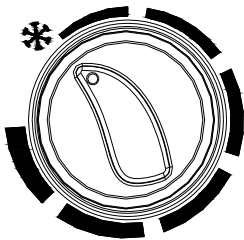

Set the thermostat to "max." and operate the appliance until the desired room temperature is reached. Turn the thermostat anticlockwise until the appliance switches off with an audible "click".

This set temperature will be kept almost constant by the appliance switching on and off automatically.

Please note that the appliance does not switch on unless the thermostat setting is higher than the room temperature.

### TIP OVER SWITCH

Your heater is designed to automatically shut the heater off when tipped forward or backward. The unit will automatically turn on once it is returned to its normal upright position.

Do not use on thick and long pile carpets, as the heater may not work, due the tip over switch not been activated.

### MAINTENANCE

1. Your appliance must be switch OFF via the main power supply and unplugged before proceeding with any cleaning work.
2. Clean the housing with a lightly damp cloth, a vacuum cleaner or a dusting brush.
3. Never use flammable or abrasive cleaning agents such as benzene or spirit to clean the appliance.
4. Never immerse the appliance in water!
5. Clean the air inlet and outlet regularly with a vacuum cleaner.
6. If the appliance is not used for an extended period it must be protected against excessive dust and dirt. Please dismount the heater and store in a dry place away from sunlight and dirt.

### WARNING:

**Do not immerse the heater in water.**

**Do not use any cleaning chemicals such as detergents and abrasives.**

**Do not allow the interior to get wet as this could create a hazard.**

## **PACKAGE CONTENTS**

1. Ceramic heater
2. Instruction manual
3. Warranty card

**Note: DOES NOT CONTAIN HAZARDOUS SUBSTANCES**

Subject to change without notice

Extra information you can find on ORION company web-site [www.orion.ua](http://www.orion.ua)

If you have any questions or suggestions, contact us by E-mail [support@orion.ua](mailto:support@orion.ua)

Manufacturer: Orion China Ltd., 1733 Lianhua St., apt. 506-509, Shanghai, People's Republic of China, 201103

Made to order: Orion Electronics Ltd. (Hungary)

