

**ORION®**

**INSTRUCTION MANUAL**  
**HAIR DRYER**

**OR-HD13**



## **BASIC CHARACTERISTICS:**

- Voltage: 115 – 230V
- Frequency: 50/60Hz
- Power: 1200W
- 2 speeds, 2 heat settings
- styling concentrator

## **HOW TO USE YOUR HAIRDRYER**

1. There is a changeable voltage switch. Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
2. Always ensure the switch is set to OFF position before plugging the unit the power outlet.
3. Use the high setting for drying hair, and use low setting for styling.
4. Should the hair dryer stop for any reason, turn it off at once and let it cool down.
5. Adjust the desired blowing strength:  
Position 0: OFF  
Position 1: Half power, medium temperature for gentle drying and styling  
Position 2: Full power, high temperature for quick drying

## **CLEANING AND CARE**

**IMPORTANT:** Always ensure that hair dryer is disconnected from the mains supply before cleaning.

Use a damp cloth for cleaning and wipe dry. This will help preserve the original finish of your hair dryer.

Abrasive cleaners should not be used.

**WARNING:** Never immerse the hair dryer in water and always ensure that plug is kept dry.

Frequently clean out any hair or fluff that becomes stuck in the inlet filter. To clean the filter, vacuum or dry brush clean, never immerse the filter in water. Failure to keep filter clean may result in overheating.



**WARNING:** Keep this appliance away from water. Do not use this appliance near water and bathtubs, showers, basins or other vessels containing water.

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING**

**DANGER-To reduce the risk of electrocution:**

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

**WARNING**-To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
4. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
5. This appliance should never be left unattended when plugged in.
6. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
7. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
9. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
10. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
11. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
12. Never use while sleeping.
13. Never drop or insert any object into any opening or hose.
14. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
15. Do not use an extension cord with this appliance.
16. Do not direct hot air toward eyes or other heat sensitive areas.
17. Attachments may be hot during use. Allow them to cool before handling.
18. Do not place appliance on any surface while it is operating.
19. While using the appliance, keep your hair away from the air inlets.
20. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

## **Terms and conditions of Good safe and efficient utilization**

- 1) There is a changeable voltage switch. Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- 2) Keep this appliance clean for proper operating. Never block or clog air intakes, otherwise overheated will be happen. Never drop or insert any object into any opening or hose.
- 3) Never allow the supply cord to be twisted, pulled, bent, or wrapped around the dryer. If the cord is twisted, to untwist the cord before use. When not in use, this appliance should be stored in a safe, dry location, out of reach of children.
- 4) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 5) Children should be supervised to ensure that they do not play with the appliance.
- 6) While using the appliance , keep your hair away from the air inlets.

The place of storage should be inaccessible for direct sun rays, high humidity. Avoid mechanical damages of the device. Storage conditions of this device: Temperature -20°C- +60°C, Humidity 10%-80%

Protect our environment: do not dispose of electrical equipment in the domestic waste.

Please return any electrical equipment that you will no longer use to the collection points provided for their disposal. This helps avoid the potential effects of incorrect disposal on the environment and human health. This will contribute to the recycling and other forms of reutilization of electrical and electronic equipment. Information concerning where the equipment can be disposed of can be obtained from your local authority.

## **Warranty obligations of the manufacturer**

Hair dryer OR-HD13 is according to the approved sample. This device is completely safe to use and doesn't make a harmful effect on the environment if the owner observes all the rules that are stated in this Instruction Manual. Warranty period for this device is 12 months from the date of purchase excluding the time spent in service center. The owner of the device has guarantee rights if warranty card is filled in correctly. Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased.

Name: ORION OR-HD13

Purpose: Hair dryer

Assembled in P.R.C. under strict control of ORION Electronics Ltd

Developed by ORION Electronics Ltd

Address of the developer: 29 Jaszbereni st, Budapest 1106, Hungary, Europe

Manufacturing date: May 2011

Guarantee period: 12 months

Warranty service: "Foxtrot service", Kyiv, 44 Schuseva st.

Certificates: SHESO081100557HSIC-1 by SGS

Net weight: 340g

Gross weight: 415g

Color: black with orange