

**ORION®**

## INSTRUCTION MANUAL

---

### MULTI BABY BOTTLE/FOOD WARMER 3 in 1

**ENGLISH**


**GB**

**ORION OB01**



**CAREFULLY READ ALL INSTRUCTIONS BEFORE  
OPERATING AND SAVE FOR FUTURE REFERENCE**

**AC230V~50Hz, 80W**



**Dear Customer, Thank you for buying ORION products!**

**Welcome to use!**

Every day parents make choices to ensure the best for their children. Choosing bottle/food warmer ORION OB01 – is the best choice! This product is a guarantee of quality and safety for your child! It has been designed to make your life as a parent a little easier. ORION OB01 will easily warm milk and food, sterilize bottles. It is easy to use. We guarantee the quality and safety of this product!

Please read this User's Guide carefully before using the appliance and save it.

### **IMPORTANT PRECAUTIONS**

**WARNING! YOU ARE FULLY RESPONSIBLE FOR YOUR OWN SAFETY WHILE USING THIS APPLIANCE**

- Check if the voltage that is indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the mains cord is damaged, it must be replaced by an authorised service centre or similarly qualified persons in order to avoid a hazard.
- Do not expose the appliance to extreme heat or direct sunlight.
- Never disassemble the base to avoid the risk of electric shock.
- Never use the base without water in it.
- Only use pure tap water without any additives.
- Do not put bleach, descaling agents or other chemicals in the appliance.
- Do not immerse the base, the cord or the plug in water or any other liquid.
- Always let the appliance cool down before moving or storing it.
- The appliance becomes extremely hot when it is in use and may cause burns if it is touched.
- Always lift the lid, the cap and the cover by their handle.
- Beware of hot steam that comes out of the vent in the cover when the appliance is in use without the cap. Steam can cause burns.
- Never move or open the appliance when it is in use or when the water in it is still hot.
- Always place and use the appliance on a dry, stable, level and horizontal surface.
- Do not place the appliance on a hot surface or in a heated oven.
- Keep the appliance out of the reach of children.
- Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- Only use baby bottles that have been approved for boiling.
- Always pour any remaining water out of the appliance after use.
- Test food on the back of your hand before serving it, to ensure that it is at a safe temperature for your baby.
- Always unplug the appliance after use.
- Never place items on top of the appliance when it is in use.
- Unplug the baby bottle food warmer when not in use.
- Do not dismantle it by yourself, baby bottle/ food warmer does not contain any user serviceable part inside.
- Do not heat food continuously, it may destroy the vitamins of the food.

**WARNING! OBSERVE SAFETY RULES TO AVOID THE RISK OF ELECTRIC SHOCK AND FIRE.**


## **DELIVERY SET**

- |                           |      |
|---------------------------|------|
| 1. Bottle/food warmer     | 1pc. |
| 2. Cup with cover         | 1pc. |
| 3. Instruction manual     | 1pc. |
| 4. Warranty card          | 1pc. |
| 5. Information card ORION | 1pc. |
| 6. Packing box            | 1pc. |


## **FEATURES**

Bottle/food warmer 3 in 1:	ORION OB01
Power supply:	AC230V~50 Hz
Power consumption:	80W
Rated current:	0,35A
Electric shock protection class:	II
Humidity protection degree:	IPX0
Color:	white/green
Box size:	152x131x170mm
Product size:	125x135x165mm
Net/gross weight:	0,4kg/0,45kg
Quick and safe food/bottle warming, bottle sterilization	
Modern design	
Easy-to-use and safe, easy to clean	

## DESCRIPTION

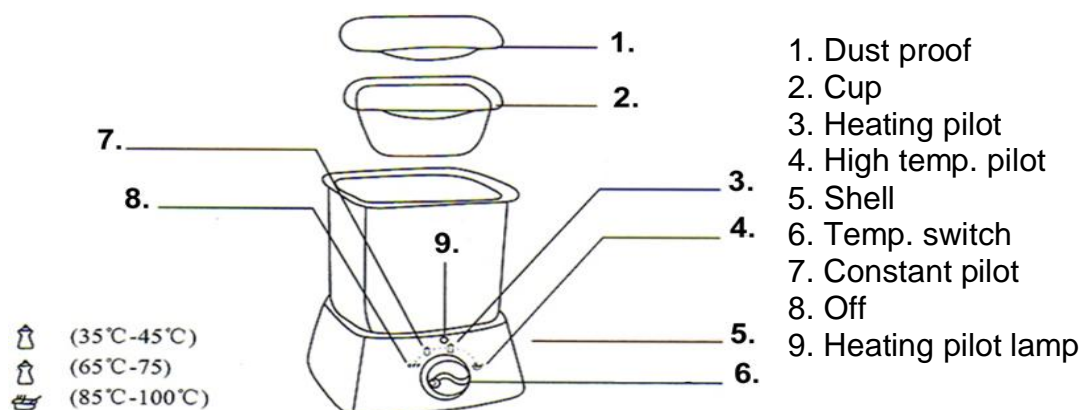


## FUNCTIONS

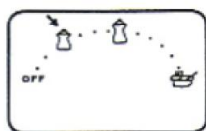


### Constant temperature

Regulate the switch to the illustrated point. It is about 40°C

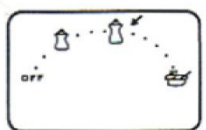

### Heating

Regulate the switch to the illustrated point. It is about 70°C

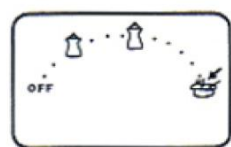

### Sterilization

Regulate the switch to the illustrated point. It is about 100°C

**Note:** Pilot lamp (9) is on while heating. Pilot is off while constant temperature.

## HOW TO USE

### Heating

1. Pour water in to the milk warmer with sanitary cup (2) (1 cup water while heating).
2. Put the milk bottle in milk warmer or put the cup with food (2) on the mild warmer.
3. Plug the warmer in to the AC main socket.
4. The heating pilot lamp will glow.
5. Regulate the switch to the point - Heating.
6. As soon as the lamp goes out remove the bottle of food and shake it to have the milk is off even temperature or stir the food.
7. Regulate the switch to the Off point and unplug the appliance.

**Note:**

- Test food on the back of your hand before serving it, to ensure that it is at a safe temperature for your baby.
- If you warming the bottle less than 3/4 full, set the temperature switch lower than the bottle symbol, so that the drink does not become too hot.
- Do not heat food continuously, it may destroy the vitamins of the food.

**Sterilization**

1. Pour water in to the milk warmer with sanitary cup (2) (2 cup of water while sterilizing).
2. Put the bottle in warmer.
3. Plug the warmer in to the AC main socket.
4. The heating pilot lamp will glow.
5. Regulate the switch to the point - Sterilization.
6. As soon as the lamp goes out remove the bottle.
7. Regulate the switch to the Off point and unplug the appliance.

**CLEANING AND MAINTENANCE**

1. Always unplug the appliance and let it cool down before you clean it.
2. Clean the base with a moist cloth.
3. Never immerse appliance in water.
4. Do not place and keep the appliance on/near hot surfaces



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

MANUFACTURING DATE - 15/01/2011

DEVELOPED BY ORION ELECTRONICS LTD

(29 Jászberényi út, Budapest 1106, HUNGARY, EUROPE)

ASSEMBLED IN P.R.C. UNDER STRICT CONTROL OF ORION ELECTRONICS LTD  
(HUNGARY, EUROPE)

CERTIFIED AND APPROVED BY ORION ELECTRONICS LTD (HUNGARY, EUROPE)

Extra information on ORION company web-site [www.orion.ua](http://www.orion.ua)

We take your opinion and offers by E-mail [support@orion.ua](mailto:support@orion.ua)